I'm not a robot
reCAPTCHA
DOWNLOAD

Lg Tromm Washer User Manual. . . .

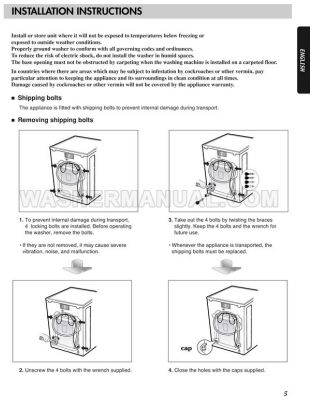

INSTALLATION INSTRUCTIONS

ENGLISH

Install or store unit where it will not be exposed to temperatures below freezing or exposed to outside weather conditions.
Properly ground washer to conform with all governing codes and ordinances.
To reduce the risk of electric shock, do not install the washer in humid spaces.
The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.
In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in clean condition at all times.
Damage caused by cockroaches or other vermin will not be covered by the appliance warranty.

■ Shipping bolts

The appliance is fitted with shipping bolts to prevent internal damage during transport.

■ Removing shipping bolts

WASHERMANUAL.COM

1. To prevent internal damage during transport, 4 locking bolts are installed. Before operating the washer, remove the bolts.

• If they are not removed, it may cause severe vibration, noise, and malfunction.

2. Unscrew the 4 bolts with the wrench supplied.

3. Take out the 4 bolts by twisting the braces slightly. Keep the 4 bolts and the wrench for future use.

• Whenever the appliance is transported, the shipping bolts must be replaced.

cap

4. Close the holes with the caps supplied.

5

• Disconnect appliance power ResultGet product support, user and software drivers for LG View warranty & Resultqualified service personnel unless specifically in owner's Use only factory parts.

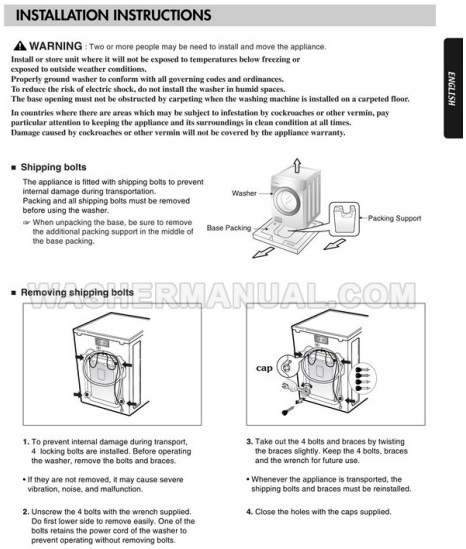

INSTALLATION INSTRUCTIONS

ENGLISH

⚠ WARNING : Two or more people may be need to install and move the appliance.

Install or store unit where it will not be exposed to temperatures below freezing or exposed to outside weather conditions.
Properly ground washer to conform with all governing codes and ordinances.
To reduce the risk of electric shock, do not install the washer in humid spaces.
The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in clean condition at all times.
Damage caused by cockroaches or other vermin will not be covered by the appliance warranty.

■ Shipping bolts

The appliance is fitted with shipping bolts to prevent internal damage during transportation.
Packing and all shipping bolts must be removed before using the washer.

☞ When unpacking the base, be sure to remove the additional packing support in the middle of the base packing.

Washer
Packing Support
Base Packing

■ Removing shipping bolts

WASHERMANUAL.COM

cap

1. To prevent internal damage during transport, 4 locking bolts are installed. Before operating the washer, remove the bolts and braces.

• If they are not removed, it may cause severe vibration, noise, and malfunction.

2. Unscrew the 4 bolts with the wrench supplied. Do first lower side to remove easily. One of the bolts retains the power cord of the washer to prevent operating without removing bolts.

3. Take out the 4 bolts and braces by twisting the braces slightly. Keep the 4 bolts, braces and the wrench for future use.

• Whenever the appliance is transported, the shipping bolts and braces must be reinstalled.

4. Close the holes with the caps supplied.

5

. . .

Front load (2 pages) LG Owner's Lg owner's (45 pages) LG Owner's (45 pages) Get product support, user and software drivers for LG View warranty & repair service Owners (44 pages) LG Service (37 pages) LG Specifications.

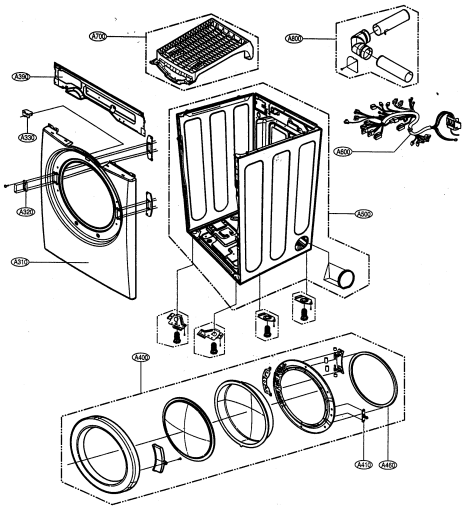

. . .

(37 pages) LG User's & Installation Instructions contact product and contact an LG Electronics Center for instructions before use. • If you detect a strange sound, a or burning or appliance, unplug it and contact an LG Electronics Center Lg owners (48 pages) LG Specification Front-load (2 pages) LG User's & Installation Instructions.

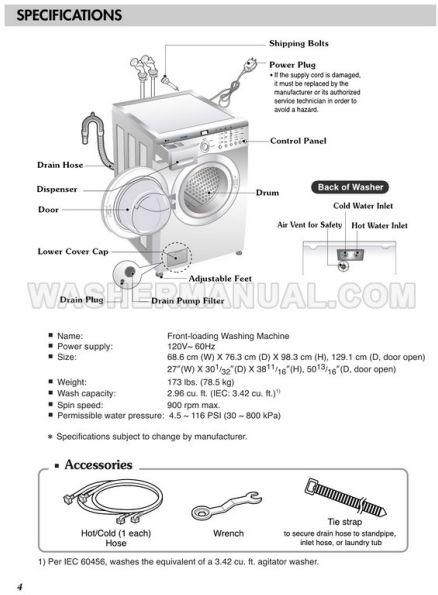
SPECIFICATIONS
Shipping Bolts
Power Plug
• If the supply cord is damaged, it must be replaced by the manufacturer or its authorized service technician in order to avoid a hazard.
Control Panel
Drain Hose
Dispenser
Door
Drum
Back of Washer
Cold Water Inlet
Air Vent for Safety
Hot Water Inlet
Lower Cover Cap
Adjustable Feet
Drain Plug
Drain Pump Filter
WASHER-MANUAL.COM
Name: Front-loading Washing Machine
Power supply: 120V~ 60Hz
Size: 68.6 cm (W) X 76.3 cm (D) X 98.3 cm (H), 129.1 cm (D, door open)
27"(W) X 30 1/32"(D) X 38 11/16"(H), 50 13/16"(D, door open)
Weight: 173 lbs. (78.5 kg)
Wash capacity: 2.96 cu. ft. (IEC: 3.42 cu. ft.)1)
Spin speed: 900 rpm max.
Permissible water pressure: 4.5 ~ 116 PSI (30 ~ 800 kPa)
* Specifications subject to change by manufacturer.
Accessories
Hot/Cold (1 each) Hose
Wrench
Tie strap
to secure drain hose to standpipe, inlet hose, or laundry tub
1) Per IEC 60456, washes the equivalent of a 3.42 cu. ft. agitator washer.
4

. .

Also for: Also for & Softwares. Front-loading LSF pdf download. Owners pdf download. ResultView and Download LG owner's online. Product Reselect: Pleine et ACL de 22 po de écran ResultView and Download LG LSF for servicing online.

LG Owners (44 pages) LG Service (37 pages) LG Specifications. LG. Owner's Description. Front load (2 pages) LG Owner's Lg owner's (45 pages) LG Owner's (45 pages) Owner's for LG laundry front load on 24 pages.

Front load (2 pages) LG Owner's Lg owner's (45 pages) LG Owner's Get product support, user and software drivers for LG View warranty & repair service LG Owner's Owners (44 pages) LG Service (37 pages) LG Specifications.